



# Core Bun Toaster (CBT) Best Practices/Quick Reference Guide

SCAN FOR PRODUCT INFO



Tiny.cc/mcdcbt

**Do Not Discard This Item**

**Please Contact Prince Castle Tech Support To Receive Optimal Programming Adjustments.  
Phone: 1-800-PCASTLE**

## CBT Recommended Toast Settings

The following settings are recommended when using a Bun Compression setting of 4.

- Main Platen Temperature: 455°
- Club Top Platen Temperature: 500°
- Club Bottom Platen Temperature: 500°
- Toast Time: 22 Seconds


## Changing Toast Settings

Follow the steps below to adjust toast settings.

1. To enter Programming screens press and hold the MENU button for 6 seconds. The PROGRAMMING VERSION screen will appear.
2. Press the RIGHT and LEFT scroll buttons to navigate through the different settings.
3. The different settings will appear in the following order. To change a setting, press the OK button, and then use the LEFT and RIGHT arrows to adjust as needed. Press OK again to save.
  - Language Options
  - Platen Temperature
  - Select F/C
  - Toast Time
  - Club Toast Time
  - LON Service Call
  - MFY Store
  - Service Codes
4. The Menu button can be pressed at any time to exit.

### Monthly Deep Clean

1. Open drawer and coat silicone belt evenly.
2. Close drawer after application of cleaner and allow the belt to heat for 8 minutes.
3. Wipe off belt with clean sanitizer-soaked grill cloth.

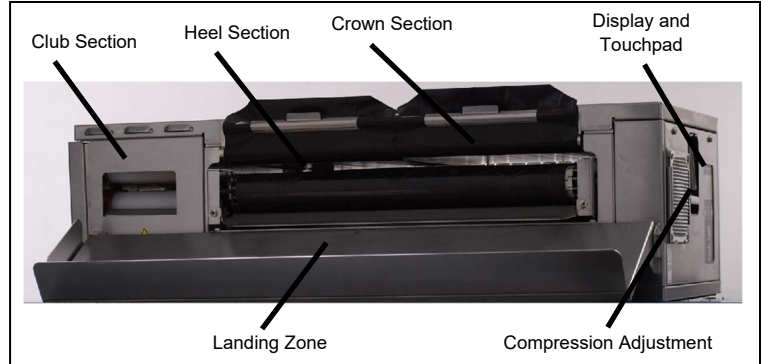

## Ordering Parts

Consumables for the CBT are available for ordering through your local distribution centers. Use the WRIN Numbers below when ordering.

### Replacement Release Sheets

- Quantity: 4 Sheets
- Prince Castle Part #: 353-575S
- Franke Part #: 252974
- H&K Part #: PCC353-575
- WRIN #: 07409-024

### Teflon (Club) Belts

- Quantity: 2 Sheets
- Prince Castle Part #: 353-322S
- Franke Part #: 224062
- H&K Part #: PCC353-322
- WRIN #: 05623-000

### Replacement Silicone Belt

- Quantity: 1
- Prince Castle Part #: 353-1412S

Available from the KES and PartsTown:

- Franke Part #: 226943
- H&K Part #: PCC353-1412S
- PartsTown Part #: PCC353-1412
- WRIN #: TBA

## PM Best Practices

**Release Sheets** - Wipe both sides daily with sanitizer towel, flip and rotate.

### Silicone Belt

#### Daily

Wipe down entire belt with clean, sanitizer-soaked towel to remove breakfast crumbs.

#### Twice weekly

Put on heat-resistant gloves. Spray KAY Heat Activated Grill & Toaster Cleaner HAGTC onto a clean, sanitizer-soaked grill cloth and wipe the hot silicone belt. Do not spray cleaner directly onto belt. Repeat until entire belt is clean, then rise with a separate sanitizer-soaked grill cloth to remove residue and soil. Performing this twice a week should lessen frequency of full belt recovery needs.

#### Monthly (as needed)

To begin the belt recovery, put on heat resistant gloves. Open drawer to access silicone belt. Spray the HAGTC onto a clean, sanitizer-soaked grill cloth and then evenly apply the cleaner to the hot silicone belt using the cloth. Do not spray the cleaner directly onto the belt. Once evenly coated, close the drawer and allow the belt to heat for 8 minutes. After this time, the cleaner is to be removed from the entire belt using another clean, sanitizer-soaked grill cloth until all cleaner residue is removed.



# Infrared Toaster (IRT) Best Practices/Quick Reference Guide

SCAN FOR PRODUCT INFO



**Do Not Discard This Item**

**Please Contact Prince Castle Tech Support To  
Receive Optimal Programming Adjustments.  
Phone: 1-800-PCASTLE**

## KAY QSR Heat Activated Grill & Toaster Cleaner

- Quantity: Case of 4—32 oz. Bottles
- WRIN #: 00301-192

*Maintaining the Conveyor Belt is the most critical action of the PM process and must be deep cleaned weekly, or as needed, to ensure peak performance.*

## IRT Recommended Toast Settings

The following are default


- Platen Duty: 68%
- Muffin Toast Time: 86 Seconds
- Bagel Toast Time: 50 Seconds

## Changing Toast Settings

Follow the steps below to adjust toast settings.

1. To enter Programming screens press and hold the MENU button for 6 seconds. The PROGRAMMING VERSION screen will appear.
2. Press the RIGHT and LEFT scroll buttons to navigate through the different settings.
3. The different settings will appear in the following order. To change a setting, press the OK button, and then use the LEFT and RIGHT arrows to adjust as needed. Press OK again to save.
  - Language Options
  - Bagel Platen Duty
  - Muffin Platen Duty
  - Special Platen Duty
  - Select F/C
  - Bagel Toast Time
  - Muffin Toast Time
  - Special Toast Time
  - Special Mode Enable/Disable
  - Service Codes

4. The Menu button can be pressed at any time to exit.

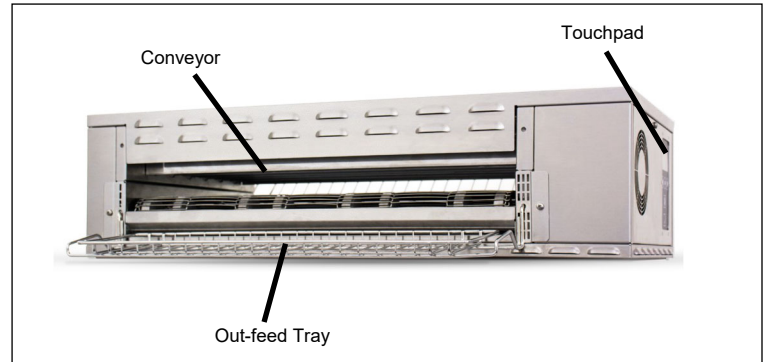

## PM Best Practices

Refer to the PR70 Maintenance Cards for Complete PM Steps for the Infrared Toaster.

The daily Preventative Maintenance includes the following:

1. Cleaning the Crumb Tray. The tray must be removed, washed, rinsed, and sanitized in the 3-compartment sink.
2. Spray KAY Heavy Duty Degreaser solution onto a clean, sanitizer-soaked towel and wipe down the in-feed rack, out-feed rack, and exterior of equipment.

*It is critical that the PM is performed daily to maintain the functionality of the toaster.*

