


**QUICK REFERENCE GUIDE**

# Core Bun Toaster, Silicone Belt (CBT-S)

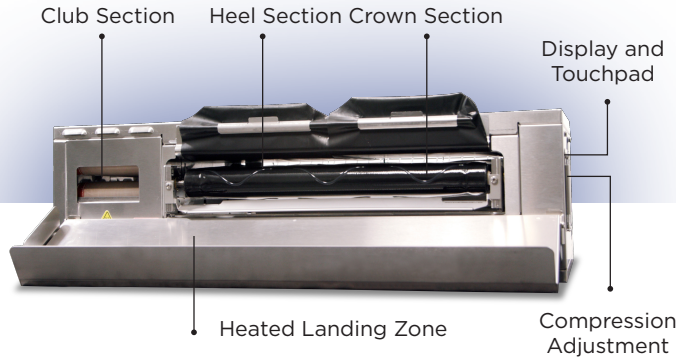

## CBT-S RECOMMENDED TOAST SETTINGS

The following settings are recommended:

**Bun Compression:** 3

**Main Platen Temperature:** 455°

**Club Top Platen Temperature:** 500°

**Club Bottom Platen Temperature:** 500°

**Toast Time:** 22 Seconds

## CHANGING TOAST SETTINGS

Follow the steps below to adjust toast settings.

1. To enter Programming screens press and hold the **MENU** button for 6 seconds. The **PROGRAMMING VERSION** screen will appear.
2. Press the **RIGHT** and **LEFT** scroll buttons to navigate through the different settings.
3. The different settings will appear in the following order. To change a setting, press the **OK** button, and then use the **LEFT** and **RIGHT** arrows to adjust as needed. Press **OK** again to save.
  - Language Options
  - Platen Temperature
  - Select F/C
  - Toast Time
  - Club Toast Time
  - LON Service Call
  - MFY Store
  - Service Codes
4. The Menu button can be pressed at any time to exit.

## Ordering Parts

Consumables for the CBT-S are available for ordering through your local distribution centers. Use the WRIN Numbers below when ordering.

## Replacement Release Sheets

- **Quantity:** 4 Sheets
- **Prince Castle Part #:** 353-575S
- **Franke Part #:** 252974
- **H&K Part #:** PCC353-575
- **WRIN #:** 07409-024

## Club Belts

- **Quantity:** 2 Sheets
- **Prince Castle Part #:** 353-322S
- **Franke Part #:** 224062
- **H&K Part #:** PCC353-322
- **WRIN #:** 05623-000

## Replacement Silicone Belt

- **Quantity:** 1 Belt
- **Prince Castle Part #:** 353-1421

Available from Marmon Link: 1-800-PCASTLE

**QUICK REFERENCE GUIDE**

**Core Bun Toaster, Silicone Belt (CBT-S)**

**PM BEST PRACTICES**

**Release Sheets** - Wipe both sides daily with sanitizer towel, flip and rotate.

**SILICONE BELT**

**Daily**

Wipe down entire belt with clean, sanitizer-soaked towel to remove crumbs.

**Monthly (and as-needed)**


To begin the belt recovery, put on heat resistant gloves. Open drawer to access silicone belt. Spray the HAGTC onto a clean, sanitizer -soaked grill cloth and then evenly apply the cleaner to the hot silicone belt using the cloth. Do not spray the cleaner directly onto the belt. Once evenly coated, close the drawer and allow the belt to heat for 8 minutes. After this time, the cleaner is to be removed from the entire belt using another clean, sanitizer -soaked grill cloth until all cleaner residue and bun residue is removed. Dry the cleaned belt by wringing out a sanitizer-soaked cloth until it is just damp, then wipe off the remaining sanitizer solution.

**FAN FILTER**

**Monthly (and as-needed)**

To clean the fan filter, remove the filter from the toaster, place into sink, and wash with sanitizer solution. Allow to air dry before reinstalling.

**NOTE:** Failure to clean filter could cause unit to overheat, resulting in a service call.

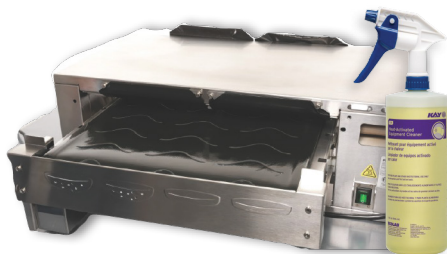

**BASIC TROUBLESHOOTING**

**CBT-S Slipping buns**

Do the following if the buns are not feeding into the toaster or getting stuck

- Do the following if the buns are not feeding into the toaster or getting stuck
- Check that the buns are within specs
- Change compression setting
- Clean the infeed rack with a sanitized cloth
- Wipe down release sheets and club belts
- Replace the release sheets and club belts
- Clean the silicone belt (See PM practices)
- Do a belt recovery (see monthly PM)

**Buns under/over toasted**

- Do the following if the buns are under/over toasted
- Slow down or speed up the conveyor by pressing and holding the left or right arrow
- Change the toast time in the settings.



Compression Setting



Adjust Belt Conveyor Speed



Speed Toast Time




Clean in-feed rack



Belt Recovery




Clean Silicone Belt

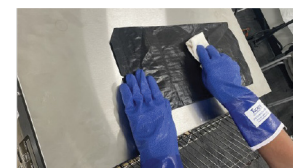

Wipe down release sheet

**QUICK REFERENCE GUIDE**

# Infrared Toaster (IRT)

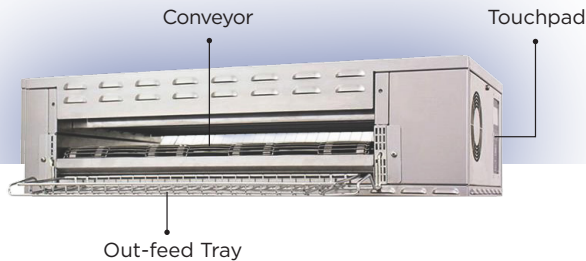

## IRT RECOMMENDED TOAST SETTINGS

The following are default

**Platen Duty:** 68%

**Muffin Toast Time:** 86 Seconds

**Bagel Toast Time:** 50 Seconds

## CHANGING TOAST SETTINGS

Follow the steps below to adjust toast settings.

1. To enter Programming screens press and hold the **MENU** button for 6 seconds. The **PROGRAMMING VERSION** screen will appear.
2. Press the **RIGHT** and **LEFT** scroll buttons to navigate through the different settings.
3. The different settings will appear in the following order. To change a setting, press the **OK** button, and then use the **LEFT** and **RIGHT** arrows to adjust as needed. Press **OK** again to save.
  - Language Options
  - Bagel Platen Duty
  - Muffin Platen Duty
  - Special Platen Duty
  - Select F/C
  - Bagel Toast Time
  - Muffin Toast Time
  - Special Toast Time
  - Special Mode Enable/Disable
  - Service Codes
4. The Menu button can be pressed at any time to exit.

## KAY QSR HEAT ACTIVATED EQUIPMENT CLEANER

**Quantity:** Case of 6x32 oz. bottles

**WRIN #:** 00301-209

## PM BEST PRACTICES

Refer to the PR70 Maintenance Cards for Complete PM Steps for the Infrared Toaster.

**The daily Preventative Maintenance includes the following:**

1. Cleaning the Crumb Tray. The tray must be removed, washed, rinsed, and sanitized in the 3-compartment sink.
2. Spray KAY Heavy Duty Degreaser solution onto a clean, sanitizer-soaked towel and wipe down the out-feed rack and exterior of equipment.
3. Spray a clean, sanitizer-soaked towel with KAY Heat Activated Equipment Cleaner and wipe the conveyor belt. Rinse with a separate clean, sanitizer-soaked towel to remove residue.
4. The heavy duty degreaser is used for other areas of the toaster.

*It is critical that the PM is performed daily to maintain the functionality of the toaster.*

